


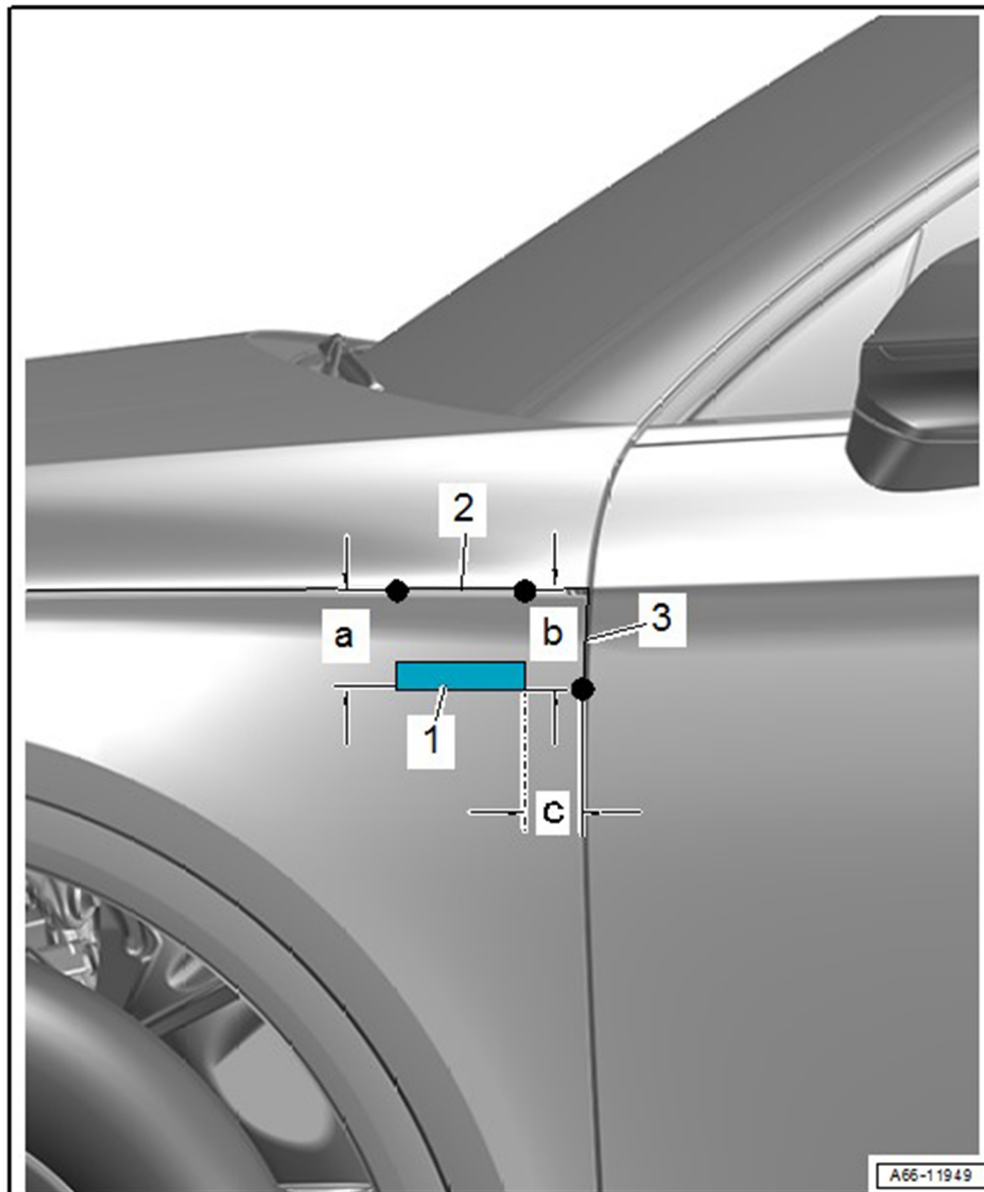

SIDE BADGES PLACEMENT GUIDELINES - AUDI TT S-LINE

1 - TYPE/EMBLEM

-S-LINE/V6T

DIMENSION A - 76MM

DIMENSION B - 74MM

DIMENSION C - 39.5MM

**2 - REFERENCE EDGE IN
FENDER**

**3 - REFERENCE EDGE ON
FENDER**